


# FILM APPLICATION BY SOLAR SCREEN

## STEP 1




CLEAN YOUR WINDOW

## STEP 3

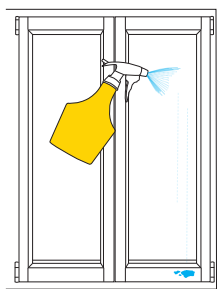


WET YOUR SURFACE  
WITH WATER MIXED  
WITH FILM-ON

## STEP 5

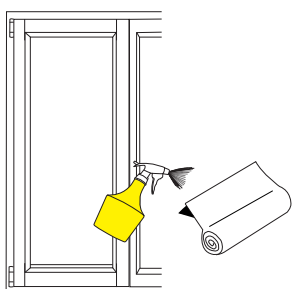


WET THE ROLL  
LENGTHWISE SO THE  
LINER CAN STICK TO  
THE ROLL AND NOT TO  
THE WINDOW

## STEP 2

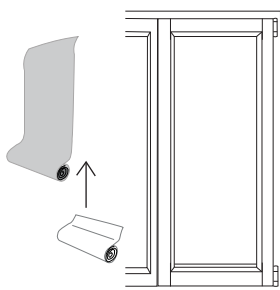


PREPARE YOUR FILM BY  
ROLLING IT UP

## STEP 4

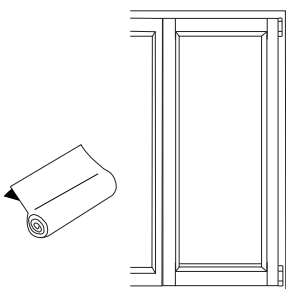


GENTLY PEEL OFF A  
SECTION OF THE LINER

## STEP 6

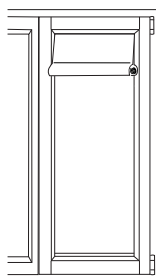


PLACE THE FILM ON  
THE WINDOW

## STEP 7

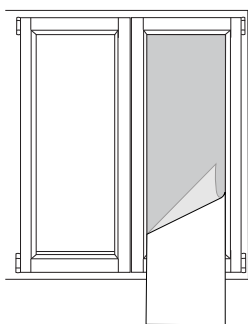

UNROLL THE FILM  
DOWN THE WINDOW  
WHILE REMOVING THE  
LINER

## STEP 9

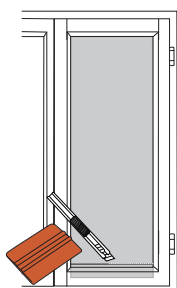

TRIM THE EXCESS OF  
FILM FROM THE EDGES  
OF THE WINDOW

## STEP 8



REMOVE ALL AIR AND  
WATER\* WITH THE  
SQUEEGEE

\* IT IS POSSIBLE THAT SMALL  
WATER BUBBLES REMAIN,  
DON'T WORRY, YOU HAVE TO  
WAIT ABOUT 4 WEEKS FOR THE  
DRYING TO BE COMPLETE.



**GOOD JOB**

YOUR WINDOW IS READY !!

FOR AN EVEN MORE  
COMPLETE EXPLANATION,  
WATCH OUR VIDEO

